

This document pertains to the HP Link-5 USB micro receiver.

NOTE: This is an edited copy from the printed format of the **HP Link-5** data sheet. To obtain a better representation of the printed form, refer to the manuals section of this product's support site.

Figure 1: HP Link-5 USB micro receiver



What is Link-5?

HP Link-5 technology makes it easy to link up to five compatible HP wireless mice or keyboards to the same USB micro receiver.

Benefits of Link-5

- All your devices will be ready to use where ever and whenever you need them without having to shuffle around multiple receivers.
- Use only one USB port for multiple devices.

Using Link-5

If you already have a Link-5 receiver plugged into a USB port on your PC, there is no need to plug in an additional receiver. To pair your keyboard or mouse, move it to within 1 foot (30cm) of your existing Link-5 receiver, press the **Connect** button on the bottom of the device, and then press a key or click a mouse button.

Troubleshooting Link-5

For Link-5 questions, please refer to <http://www.hp.com/support>.

Link-5 Mouse and Keyboard LED Information

	Mouse Scroll Wheel LED	Keyboard Sleep LED
In pairing mode	2 blinks per second. NOTE: The mouse will stay in pairing mode for 10 seconds.	LED stays on. NOTE: The keyboard will stay in pairing mode for 10 seconds.
Device successfully paired	5 blinks per second, stops after 10 blinks.	5 blinks per second, stops after 10 blinks.